

Dear beloved guest,

Welcome to

TANKI FLIP TOWNHOUSES



We're truly delighted to have you with us. We know you have traveled from far to stay here, and we sincerely hope you enjoy a wonderful and relaxing vacation. For your convenience we guide through all appliances which are available to use in the house by info boards on the walls. Our team is always happy to assist you please don't hesitate to contact the property manager if you need anything during your stay.

Wishing you an unforgettable experience in Aruba!

Warm regards,



TANKI FLIP TOWNHOUSES TEAM

Estimado/a huésped.

¡Bienvenido/a a Tanki Flip Townhouses! Estamos encantados de tenerle con nosotros. Sabemos que ha viajado desde lejos para alojarse aquí y deseamos de corazón que disfrute de unas vacaciones maravillosas y relajantes. Para su comodidad, hemos colocado paneles de información en las paredes con instrucciones de uso de todos los electrodomésticos disponibles en la casa. Nuestro equipo estará siempre encantado de ayudarle. Si necesita cualquier cosa durante su estancia, no dude en ponerse en contacto con el administrador de la propiedad.

¡Le deseamos una experiencia inolvidable en Aruba!

Atentamente, El equipo de Tanki Flip Townhouses.

Get the Most Out of Your Stay

Welcome! We hope you will enjoy your stay with us. Please take a moment to read these short reminders to help us keep a comfortable and sustainable environment for everyone:

Smoking Policy

Smoking of any kind is not allowed inside the property. If the fire alarm is triggered due to smoking, a **\$250** fine will apply to cover alarm activation and deep cleaning costs. Drugs use is not allowed in or outside the property. Thank you for respecting this rule and keeping our air fresh for all guests.

Water & Energy Conservation



Please avoid unnecessary water use and close the tap after each use.



Turn off the lights when leaving the room.



For your safety and comfort, close all windows when the A/C is on or when leaving the property.

Explore the Island

Make the most of your stay — explore local restaurants, beaches, and culture. Supporting the community helps preserve the island's unique charm.

Thank you for your cooperation and for helping us create a more sustainable experience for everyone.

GENERAL INFORMATION

Address:

**Tanki Flip Townhouse
Boegoeroei 11 Z, Palm Beach, Aruba**

Contact Number:

+297 5932345

Languages Spoken:

English, Español, Dutch & Papiamentu

Wi-Fi & Connectivity :

Network Name (SSID):

:Password

Check-in

Check-out

Check-in Time: 4PM

Check-out Time: 12 PM

Late Check-out Policy:

On request

Cleaning & Maintenance:

**Please dispose of trash
before checking out.**



House Rules:

**No smoking inside the
property.**



No parties or loud music.



Pets are not allowed.



Quiet hours:

11PM-6AM

Please close windows and doors, air-conditioning will turn off automatically when leaving the property, there is no need to turn it off.

LOCAL INFORMATION

Nearest Supermarket:

SAVE MORE FOOD STORES

Boegoeroei 45, Noord, Aruba
Phone: +297 587 1090
Hours: 7:00 am to 8:00 pm

SUPER DO IT CENTER SHABA & GROCERIES

Address: Rte 2, Noord, Aruba
Phone: +297 583 1111
Hours: 8:00 am - 8:00 pm

BOTICA SANTA ANNA

Address: Noord 41B, Noord, Aruba
Phone: +297 586 8181
Hours: Opens 7:30 am | Closed 7:30 pm

NEAREST RESTAURANT:

Quinta del Carmen
Bubali 119, Oranjestad, Aruba
Passions On the Beach
J.E. Irausquin Blvd 252, Noord, Aruba

Taxi phone number:

297-Taxi Tours and Transfers
Phone: +297-7410504

Taxi Aruba
Phone: +297-5600895



Emergency Numbers:

EMERGENCY (Police, Fire, Ambulance)

911 Works island-wide for all urgent emergencies.

Police:

Main Police Line (non-emergency): 100

Police Stations:

- Noord Police Station Tel: +297 587 0009
Emergency line: 107 Address: Shaba 22, Noord
- Oranjestad Police Station Emergency line: 100
- San Nicolas Police Station Emergency line: 104
- Santa Cruz Police Station Emergency line: 105

Ambulance:

- Ambulance Service (non-emergency): +297 527 4000

Fire Department:

- Fire Department Aruba: +297 582 1199

Medical Services:

- Horacio Oduber Hospital (Main Hospital) +297 527 4000
- Urgent Care Aruba (Low-rise hotel area) +297 586 0448

Coast Guard:

- Aruba Coast Guard: +297 593 9648

Airport / Immigration:

- Queen Beatrix International Airport +297 524 2424

Tourism Assistance:

- Aruba Visitor Hotline / Tourist Assistance +297 588 1010

Near hospital:

Horacio Oduber Hospital

Address: Dr. Horacio E. Oduber Boulevard #1, Oranjestad, Aruba

Phone: +297 527 4000

Hours: Open 24 hours



HOW TO REPORT DAMAGES

Guest Guide

How to Report Damages at Tanki Flip Townhouses

At Tanki Flip Townhouses, we want every guest to enjoy a comfortable and stress-free stay. If you notice any damage to your townhouse or anywhere on the property, please report it as soon as possible so we can take care of it right away.




Check Your Room Upon Arrival

Please take a quick look around your home when you check in. If you see anything damaged or not working properly (example: lights, AC, furniture, shower, appliances), kindly inform us within the first hour of arrival so we can address it immediately.

How to Report Damages

You may report damages in any of the following ways:

 **WhatsApp / Call**
+297 740 2345 (Available during front-desk hours)

Information to Provide

To help us fix the issue quickly, please let us know:

- What is damaged or not working
- When you noticed it
- If it affects your stay ("AC not cooling," "water leak," "broken lamp")

Photos are always appreciated.

What Happens Next

Once reported:

- Our staff will acknowledge your message.
- A maintenance team member will be sent to your room.
- If the damage is major and affects your comfort, we will do our best to provide a solution or room change (based on availability).



TANKI FLIP TOWNHOUSES TEAM

Important Note About Damages

If damage is pre-existing, you will not be charged just to report it upon arrival.

If damage happens during your stay, please report it immediately so we can evaluate and repair it.

Charges apply only in cases where damage is caused by negligence or misuse.

We always aim to be fair and transparent.

We're Here to Help

Our goal is to ensure that everything in your room works properly, and your stay is comfortable. If you have questions or need assistance, please reach out anytime during desk hours.

Instructions to extend your stay:



Send request to
info@tankifliptownhouses.com



GENERAL HOME & APPLIANCES INFO:



Coffee machine Instructions:



1. **Fill the water tank:** Open the lid on the back and fill the water tank with clean tap water. Do not exceed the MAX line.
2. **Turn on the machine:** Plug it in and press the power button. Wait until the indicator light stops flashing (the machine is ready).
3. Choose your coffee type.
4. Close the lid securely.
5. Place your cup under the coffee outlet.
6. **Select the brew size:** Choose from 3 options (small, medium, or large cup).
7. **Press the start/brew button.** The machine will automatically brew your coffee in about 30–60 seconds.
8. **After brewing:**
 - The machine stops automatically.
 - Remove the used pod or clean the reusable filter.
 - Rinse the drip tray and empty the used capsule container if needed.
9. **To make cappuccino or latte:**
 - Use the steam/milk frother if included (follow the milk frother instructions).
10. Turn off the machine after use and unplug it for safety.



Rice Cooker Instructions

1. **Measure and rinse the rice:** Use the measuring cup included. Rinse the rice under cold water until the water runs clear. (This helps remove excess starch and prevents sticking.)
2. **Add rice and water:** Place the rinsed rice into the inner pot. Add water according to the rice-to-water ratio (usually 1 cup of rice to 1½ cups of water). Do not exceed the MAX line inside the pot.
3. **Place the inner pot and close the lid:** Make sure the exterior of the inner pot is dry before placing it inside. Close the lid securely.
4. **Plug in and select the cooking function:** Plug in the cooker. Press the Menu button to select your desired function (White Rice, Brown Rice, Quick Rice, Steam, or Keep Warm).
5. **Start cooking:** Press the Start button. The display will show cooking time or a countdown. The cooker will automatically adjust heat and time.
6. **Wait for the cooking cycle to complete:** When the rice is done, the cooker will automatically switch to Keep Warm mode. Let the rice sit for 5–10 minutes before opening the lid to allow it to finish steaming.
7. **Fluff and serve:** Use the provided rice spatula to fluff the rice before serving. Avoid using metal utensils to protect the non-stick surface.
8. **After use:** Unplug the cooker. Clean the inner pot, lid, and accessories after they have cooled. Do not immerse the base of the cooker in water.



Air fryer

Instructions

1. **Place the air fryer on a flat, heat-resistant surface.** Keep it away from walls or objects to allow proper ventilation.
2. **Insert the basket and tray.** Make sure both are clean and properly positioned inside the unit.
3. **Plug in the air fryer.** The control panel will light up.
4. **Preheat (optional but recommended):** Press the Air Fry button, set the temperature and time, then press Start to preheat for 2–3 minutes.
5. **Add food. When preheating is done,** open the basket, place food evenly inside (do not overfill), and close it securely.
6. **Select your cooking function.** The Vortex Plus 6-in-1 offers:
 - Air Fry (crispy results)
 - Roast
 - Bake
 - Broil
 - Reheat
 - Dehydrate
7. **Adjust temperature and time.** Use the Temp/Time buttons to set your desired cooking level.
8. **Start cooking. Press Start.** The unit will begin heating. Midway through cooking, the display may show “Turn Food” – open the basket and shake or flip food for even cooking, then close it again.
9. **End of the cooking cycle.** When finished, the air fryer beeps and the display shows “End.” Carefully remove the basket using the handle (it will be hot).
10. **Unplug and clean after use.** Let the basket and tray cool, then wash them with warm, soapy water or in the dishwasher (if marked dishwasher-safe). Wipe the exterior with a damp cloth.



Electric Kettle

Instructions

1. **Place the kettle on a flat, stable surface.** Ensure the base and kettle bottom are dry before use.
2. **Fill it with water.** Open the lid and fill the kettle with the desired amount of water. Do not exceed the MAX line. ⚠ Use only water — do not fill with milk or other liquids.
3. **Close the lid securely.**
4. **Place the kettle on its base.** Make sure it's seated properly to connect with the heating element.
5. **Turn on the kettle.** Press the power switch located near the base handle. The indicator's light will turn on, and heating will begin.
6. **Wait for the water to boil.** The kettle will automatically turn off once the water reaches boiling temperature.
7. **Pour the hot water carefully.** Always use the handle and keep your hands away from the spout. ⚠ Steam can cause burns — pour slowly.
8. **After use:**
 - Unplug the kettle.
 - Allow it to cool before cleaning.
 - Empty any remaining water.
 - Wipe the inside with a soft cloth.
 - Do not immerse the base or electrical parts in water.
9. **Descaling (monthly cleaning):**
 - Fill the kettle with 1 cup vinegar + 2 cups water.
 - Boil, then let sit for 15–20 minutes.
 - Rinse thoroughly with clean water..



Bosch Dishwasher

Instructions 1

This dishwasher is designed to clean your dishes efficiently using a variety of programs. Please follow the instructions below to ensure optimal performance.

Before You Start:

Scrape food residue off plates (no need to pre-rinse).
Make sure nothing blocks the spray arms.
Check that the dishwasher tablet compartment is empty and dry.

1. Loading the Dishwasher

Top rack: glasses, cups, bowls, small plates.
Bottom rack: large plates, pots, pans, cutting boards.
Cutlery basket: forks, knives, spoons (mix positions to avoid nesting). Avoid placing wooden items or fragile glassware inside.

2. Add Detergent

Use 1 dishwasher tablet or the recommended detergent.
Place it inside the detergent compartment and close the lid firmly.

3. Select a Program

Choose the cycle that best fits your needs:

Auto (45–65°C) — Recommended
Automatically adjusts water temperature and time based on the load.
Best for everyday dishes
Duration: approx. **4:30 hours**

Eco — Energy Saving
Uses less water and electricity.
Best for regular loads
Duration: long cycle (energy efficient)

Intensive

High temperature for tough or greasy dishes.
Best for pots, pans, very dirty dishes



Bosch Dishwasher

Instructions 2

Quick L

Short cycle for lightly soiled dishes.
Best for: small loads or quick turnaround

Favorite

Your saved custom program (if pre-set).

4. Start the Dishwasher

1. Close the dishwasher door firmly.
2. Press Start.
3. The machine will lock and begin the cycle.

5. When the Cycle Is Finished

Wait a few minutes before opening to allow steam to escape.
Open the door slightly to help dishes dry faster. Unload bottom rack first to avoid water dripping from the top rack.

6. Important Safety & Care Tips

Do NOT wash wooden utensils, cast iron, or delicate crystal.
Clean the filter every 1–2 weeks: twist, lift, rinse, replace.
Make sure the spray arms rotate freely.
Do not overload the dishwasher.
Use rinse aid for best drying performance.

7. Troubleshooting

No water entering?

→ Check that the water valve is open.

Dishwasher not starting?

→ Ensure the door is fully closed.

Dishes still dirty?

→ Avoid overloading and check spray arms.

Bad smell?

→ Clean the filter and run an empty cycle with a cleaning tablet.



Samsung Full HD F6000 Smart TV (2025) Instructions 1

This Smart TV includes HDR, Object Tracking Sound Lite, Samsung Knox security, Tizen One UI, and all major streaming apps.

1. Turning the TV On / Off

- Press the Power button on the remote.
- The red standby light turns off when the TV is on.

To turn off → press Power again.

2. Changing Channels

- Press CH+ / CH- to move through channels.
- Or press 123 button to enter a channel number manually.

3. Adjusting Volume

- Press VOL+ / VOL- on the remote.
- Press Mute to silence the TV.

4. Using Smart TV Features (Tizen One UI)

Press the Home button to open the Smart Hub.

From here, you can access:

- Netflix
- YouTube
- Prime Video
- Samsung TV Plus (free live channels)
- Web Browser
- Apps Store

Use the directional arrows to navigate → press OK/Enter to select.

5. Connecting to Wi-Fi

- Press Settings (gear icon).
- Go to General & Privacy.
- Select Network → Open Network Settings.
- Choose Wireless.
- Select your Wi-Fi network.
- Enter the password.
- Confirm Connect.



Samsung Full HD F6000 Smart TV (2025) Instructions 2

| 6. Troubleshooting

No sound?

→ Check Mute, volume level, or Sound Output.

| **No picture?**

→ Check HDMI input or device connection.

| **Wi-Fi not connecting?**

→ Restart router.

→ Restart TV (hold Power button for 5 seconds).

| **Remote not responding?**

→ Replace batteries or re-pair remote.

| **App is freezing?**

→ Press and hold Power (5 sec) → TV restarts → reopen app.

| 7. Safety Tips

- Do not place liquids near the TV.
- Do not block ventilation openings.
- Mount securely if using wall brackets.
- Keep children from pulling on cables.



REVLON Infrared Hair Dryer (1875W) Instructions 1

This professional infrared dryer uses ionic + ceramic technology to reduce frizz, protect moisture, and leave hair smooth and shiny.

| It includes:

- Infrared Heat System
- Ionic Frizz Control
- Ceramic Coating
- Air Concentrator
- Diffuser

| Before Use:

- Ensure hair is towel-dried (not dripping wet).
- Plug the dryer into a standard outlet.
- Keep the cord away from the water.
- Select the right attachment (if needed):
 - Concentrator: focused airflow → sleek, smooth styles
 - Diffuser: enhances curls → reduces frizz

| Power & Heat Settings:

The dryer typically has 3 heat and 2 speed settings.

Speeds

- Low → gentle airflow
- High → strong airflow

| Heat

- Cool → sets style, reduces frizz
- Warm → gentle drying
- Hot → fast drying (use with caution)

Choose your preferred speed + heat combination.

| Example:

High Speed + Warm Heat = fast drying without overheating.



REVLON Infrared Hair Dryer (1875W) Instructions 2

| Press COOL to:

Seal the cuticle
Reduce frizz
Hold styles in place
Use at the end of drying for a smooth finish.

| Cleaning & Maintenance

Unplug before cleaning.
Remove lint from the back air filter regularly.
Wipe the exterior with a dry or slightly damp cloth.
Do not submerge in water.
Ensure attachments are fully dry before storing.

| Safety Tips

- ⚠ Do NOT use near water or while bathing.
- ⚠ Keep out of reach of children.
- ⚠ Do not block the air intake.
- ⚠ Avoid wrapping the cord tightly around the dryer.
- ⚠ If it overheats, turn it off and let it cool for 5 minutes.

| Troubleshooting

Hair dryer won't turn on?
Check outlet, plug, or reset button (if applicable).

Airflow is weak?
Clean the rear filter.

Burning smell?
Unplug immediately; remove lint from filter.



ThermoMate 24" Built-In Microwave Drawer Instructions 1

This microwave drawer features touch controls, sensor cooking, 11 power levels, automatic presets, and includes a defrosting rack. It opens smoothly at counter height for easy loading and safe use.

Opening & Closing the Drawer

To Open

Press the **OPEN button** on the control panel.
The drawer will slide out automatically.

To Close

Press the **CLOSE button**, or gently push the drawer inward until fully shut.

⚠ Do not force the drawer. Always use the **open/close** mechanism.

Placing Food Inside

Use microwave-safe containers only (no metal, foil, or non-microwave plastics). Center the dish in the drawer for best results. Use the defrosting rack when thawing larger or thicker foods (meat, poultry, fish).

Basic Microwave Operation

To Start Cooking

1. Place the dish in the drawer.
2. Close the drawer completely.
3. Select cooking time or program.
4. Press **START**.

To Stop or Pause

Press **STOP/CANCEL**.



ThermoMate 24" Built-In Microwave Drawer Instructions 2

| Power Levels (11 Levels Total)

Use the Power Level button (or touch setting) to choose levels from 1–11:

- | **High (10–11):** rapid heating, boiling, reheating leftovers
- | **Medium (6–9):** casseroles, vegetables, soups
- | **Low (3–5):** simmering, gentle reheating
- | **Very Low (1–2):** defrosting, softening foods
- | **Sensor Cooking** (Automatic Programs)

| The microwave automatically adjusts time and power based on steam and humidity.

| Common Sensor Presets:

- Sensor Cook
- Sensor Reheat
- Sensor Popcorn
- Sensor Beverage
- Sensor Vegetables

| Just select the preset and press

START — the microwave will detect when food is done.

| Automatic Presets

| Use these built-in settings for convenience:

- Popcorn
- Beverage
- Potato
- Frozen vegetables
- Fresh vegetables
- Pizza reheat
- Frozen entrée
- Auto Defrost

| **Select preset** → enter quantity (if needed) → **press START.**



ThermoMate 24" Built-In Microwave Drawer Instructions 3

| Defrosting (Using the Rack)

Auto Defrost

1. Press AUTO DEFROST.
2. Choose food type (meat, poultry, fish).
3. Enter weight.
4. Press START.

| Manual Defrost

1. Press TIME DEFROST.
2. Enter time.
3. Set low power level (1–2).
4. Press START.

Use the defrosting rack for better airflow and even thawing.

| Keep Warm Function

Keeps food warm without overcooking.
Uses low power level and gentle heat.

| Cleaning & Care

- Allow microwave to cool before cleaning.
- Wipe interior with a damp cloth and mild detergent.
- Lift and clean the base of the drawer regularly (crumbs accumulate).
- Clean stainless steel exterior with a soft cloth.
- Do not spray cleaning products directly into the drawer.
- Do not immerse any part in water.



ThermoMate 24" Built-In Microwave Drawer Instructions 4

| ✂ Troubleshooting

Microwave won't start?
Ensure drawer is fully closed.
Check power connection.

Food not heating properly?
Check power level.
Ensure container is microwave-safe.

Drawer stuck or slow?
Turn off power for 30 seconds and restart.

Sparking inside?
Remove any metal or foil immediately.

| ● Safety Tips

Never use metal, foil, or dishes with metallic trim.

Do not operate when empty.

Keep vents unblocked.

Supervise children when using.

Avoid slamming the drawer.



Fire Extinguisher Instructions

Description

The Kidde FA110 is a multipurpose (ABC) fire extinguisher designed for use on:

- A: Ordinary combustibles (wood, paper, cloth)
- B: Flammable liquids (gasoline, oil, grease)
- C: Electrical equipment fires

How to Use – P.A.S.S. Method

1. P – Pull the pin

- Hold the extinguisher upright.
- Pull the safety pin located at the top to break the tamper seal.

2. A – Aim at the base of the fire

- Stand about 6–8 feet (2–2.5 m) from the fire.
- Aim the nozzle or hose at the base of the flames, not at the top.

3. S – Squeeze the handle

- Squeeze both handles together to release the extinguishing agent.

4. S – Sweep side to side

- Sweep the nozzle from side to side across the base of the fire.
- Move closer as the fire diminishes, continuing to aim at the base.

5. Stop discharge when the fire is completely out, or the extinguisher is empty.

⚠ Safety and Maintenance

- Always make sure everyone is safe and that you have a clear escape route.
- If the fire cannot be controlled within seconds, evacuate immediately and call emergency services.
- After any use, recharge or replace the extinguisher immediately.
- Inspect monthly:
 - Ensure the pressure gauge needle is in the green zone.
 - Check for corrosion, damage, or broken seals.
 - Store in an easily accessible, visible location.
 - Do not test or discharge unnecessarily – it may reduce available pressure.



Front Load Washing Machine Instructions 1

Daily Use

1. **Sort and load laundry.**
Separate clothes by color, fabric, and washing temperature.
Do not overload (maximum 2.7 cu ft capacity).
2. **Add detergent and softener.**
Pull out the detergent drawer.
Add:
Detergent → main wash compartment.
Fabric softener → middle compartment (do not exceed MAX line).
3. **Close the door securely.**
Ensure the door is completely closed before starting.
4. **Select a washing cycle.**
Turn the program knob to choose one of 16 cycles:
Normal, Heavy, Quick Wash, Whites, Delicates, Wool,
Baby Care, Sanitize, Steam, Spin Only, etc.
5. **Adjust settings if needed.**
Use the control panel buttons to modify temperature,
spin speed, or steam options.
6. **Start the wash.**
Press the Start/Pause button.
The display will show the remaining time.
7. **End of the cycle.**
The washer will beep when it is finished.
Wait about 2 minutes until the door unlocks automatically.
Remove laundry promptly to prevent wrinkles or odors.



Front Load Washing Machine Instructions 2

◆ Steam Function

- | Select a steam-enabled cycle (e.g., Sanitize or Allergy Care).

Steam helps remove stains and allergens from fabrics.
Do not use with delicate fabrics such as silk or wool.

| ◆ After Use

1. Leave the door open for ventilation.
2. Wipe the rubber seal and drum with a dry cloth.
3. Clean the detergent drawer weekly.
4. Once a month, run a "Drum Clean" cycle or hot wash with no laundry.

| ⚠ Safety & Maintenance

- Do not wash waterproof items or rugs.
- Keep children and pets away during the operation.
- Unplug the washer before cleaning or moving.
- Clean the drain pump filter every few weeks to prevent clogging.



Electric Dryer Instructions 1

Daily Use

- 1. Sort and load laundry.**
Separate clothes by fabric type and dryness level.
Shake out garments before placing them inside.
Do not overload – the drum should be about 2/3 full for best performance.
- 2. Check the lint filter.**
Always clean the lint screen before or after each load.
Slide it out, remove the lint, and replace it securely.
- 3. Close the door firmly.**
- 4. Select a drying program.**
Use the program knob or digital panel to choose one of the available cycles, such as: Normal, Heavy Duty, Delicate, Quick Dry, Air Fluff, Towels, Bedding, Steam Refresh, etc.
- 5. Adjust settings if needed.**
Set temperature and dryness level (More / Normal / Less Dry).
Use Wrinkle Release or Steam Refresh if available.
- 6. Press "Start/Pause."**
The dryer will begin heating and tumbling automatically.
Do not open the door during the first few minutes of operation.
- 7. End of the cycle.**
When finished, the dryer will beep, and the drum will stop.
Wait a few seconds before opening the door.
Remove clothes promptly to avoid wrinkles.



Electric Dryer Instructions 2

| ► After Each Use


1. Clean the lint filter thoroughly.
2. Leave the door slightly open to allow moisture to escape.
3. Wipe the drum and gasket occasionally with a dry cloth.

| Maintenance & Safety

- Clean the vent hose and duct at least every 3 months to prevent lint buildup.
- Do not dry items that contain foam, rubber, or wax.
- Do not place oily or gasoline-soaked fabrics in the dryer.
- Always unplug before cleaning or maintenance.
- Keep children and pets away during the operation.



Airconditioner Instructions

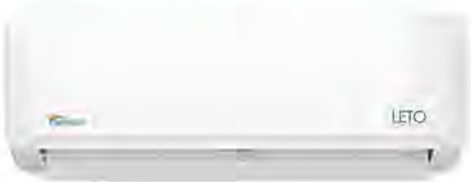

| Cooling Mode

1. Use the remote control to turn ON the unit.
2. Press the MODE button until the snowflake icon appears.
3. Set your desired temperature (recommended: 22–24°C / 72–75°F).
4. Adjust the fan speed (LOW / MED / HIGH / AUTO) using the "FAN" button.
5. Keep doors and windows closed for the best cooling efficiency.

| Heating Mode

1. Press MODE until the sun icon appears.
2. Set the desired temperature (recommended: 24–26°C / 75–78°F).
3. Wait a few minutes — warm air starts after the internal coil heats up.

| Fan & Dehumidifier (DRY) Modes

- **FAN:** Circulates air without cooling or heating.
- **DRY:** Removes humidity; ideal for rainy or humid days.

Please bear in mind the air conditioner system turns on automatically when entering the rooms, there is no need to manipulate it, or turning off when leaving the bedroom as it will turn off.



Security Safe and Lock Box Instructions

◆ Setting Your Personal Code

1. With the door open, press and hold the "Reset" button (located inside the door, near the hinge) until the yellow or red indicator light turns on.
2. Enter your new 3–8 digit code on the keypad.
3. Press the "#" or "Lock" button (depending on model) to confirm.
4. The light will flash or beep once — your new code is now set.

◆ Locking the Safe

5. Close the door and press the "#" or "Lock" button.
6. You will hear the motorized lock engage.
7. Gently test the handle to ensure it is locked.
8. Opening the Safe with Your Code
9. Enter your personal code on the keypad.
10. Press the "#" or "Unlock" button.
11. When the green light turns on, open the door using the handle.

(If the red light blinks or you hear three beeps, the code is incorrect — try again.)

◆ Low Battery Warning

- When the indicator light flashes red or the keypad becomes unresponsive, contact the manager.



HOUSE KEEPING

Information

We'll take care of everything while you relax — or enjoy your day out! To help us clean efficiently and reduce waste:



If you would like fresh towels, kindly place all used towels in the laundry basket when requesting room cleaning. Our team will replace them with clean ones.



If you wish to reuse your towels, please hang them on the towel rack. Towels left hanging indicate "reuse" for the next day.



Please avoid leaving towels on the floor so we can keep your bathroom tidy and safe.



Don't use bath towels for removing make-up, cleaning rental-cars, shoes and floors.



Don't use bath towels for beach use. Please use the beach towels to take with you to the beach.

By reusing towels, you help us save water and energy, reducing detergents released into the environment.

- Clear personal items from the bed and bathroom countertops.
- Turn off electronics (lights, TV) before leaving the room.

We will clean your room every 2 days. If you do not want us to clean it or need any towel replacement, please contact the manager.

Thank you for helping us keep your space fresh, cozy, and welcoming. We truly appreciate your collaboration — rest well and let us do the rest!

TOWELS AND

SUSTAINABILITY



To help us keep your room fresh and to protect the environment, please use the guidelines below:



If you would like fresh towels, kindly place all used towels in the laundry basket when requesting room cleaning. Our team will replace them with clean ones.



If you wish to reuse your towels, please hang them on the towel rack. Towels left hanging indicate “reuse” for the next day.



Please avoid leaving towels on the floor so we can keep your bathroom tidy and safe.



By reusing towels, you help us save water and energy, reducing detergents released into the environment.

If you need additional amenities or have any special requests, please contact Operations.

Thank you for helping us care for our planet. Your comfort matters—so does the environment.



OUTDOOR SHOWER

- Please rinse off before using the plunge pool to keep the water clean.
- Turn the handle gently to control water pressure and temperature.
- Be cautious — surfaces may be slippery when wet.
- Do not use soap or shampoo in the outdoor shower if it drains directly to the garden.
- Always turn off the water completely after use.
- Towels are available inside your room.

PLUNGE POOL

- The plunge pool is designed for relaxation and cooling off — it is not a swimming pool.
- Enter slowly and carefully; the depth may vary.
- Do not jump or dive.
- Glass items are not allowed near or inside the pool.
- Children must always be supervised by an adult.
- Please dry off before entering your room to prevent slipping.
- The pool is for registered guests only.
- Don't put towels or any clothing over the glass walls.
- It's strictly prohibited to smoke inside pool or pour any liquids such as soap or gels inside the pool. If you violate any of these rules, you will be fined with 250 usd.